


ALLBROX



INNER DOOR INSTRUCTIONS

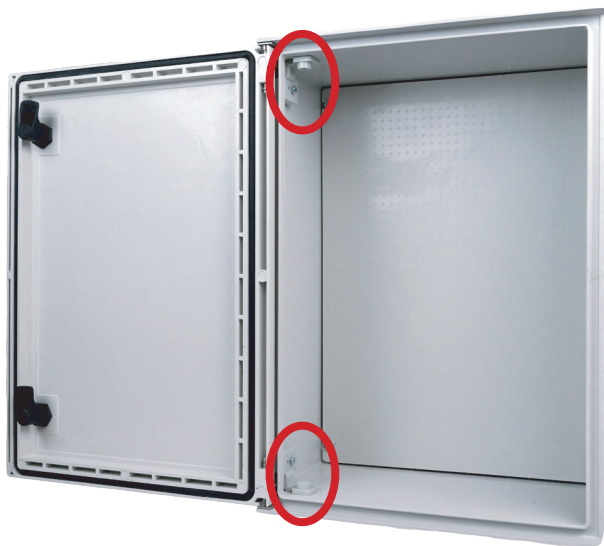

1) Fasten 2x plastic hinge as shown using 2x (M5x10) screws. There are 3 possible positions depending on the height of the inner door.



2) Fasten 2x plastic catch as shown using 4x (M5x10) screws.



3) Fit door as shown by pulling back the spring loaded hinge and release when aligned with hole in plastic hinge.





ALLBROX





INNER DOOR INSTRUCTIONS

DIFFERENT HEIGHT OPTIONS

INTERNAL DOOR
DEPTH SETING: HIGH

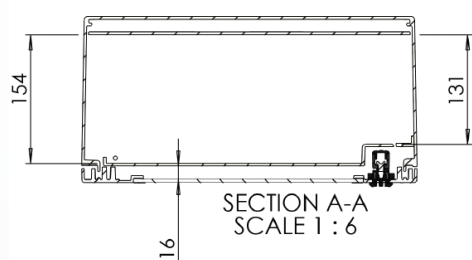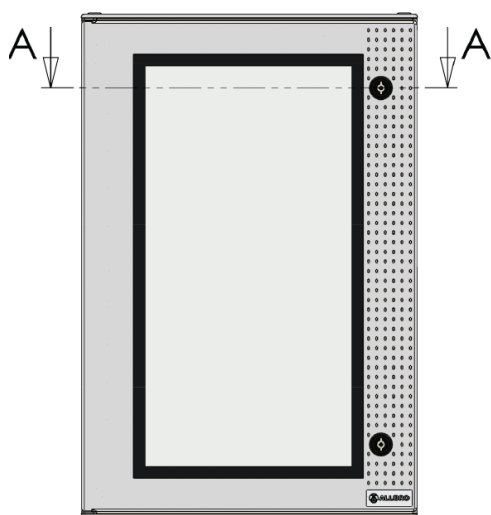

INTERNAL DOOR
DEPTH SETING: MIDDLE

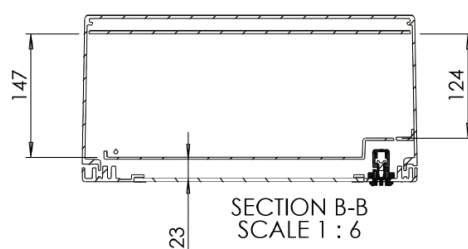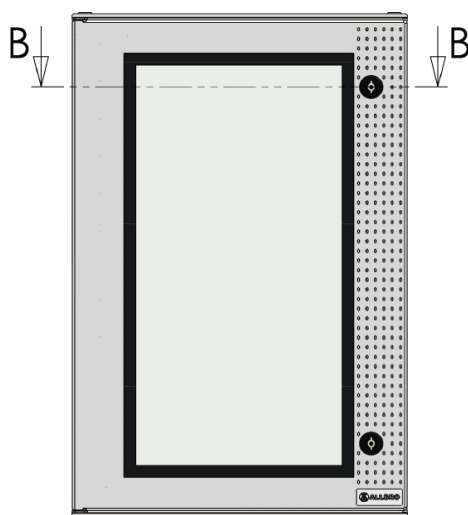

INTERNAL DOOR
DEPTH SETING: LOW

